



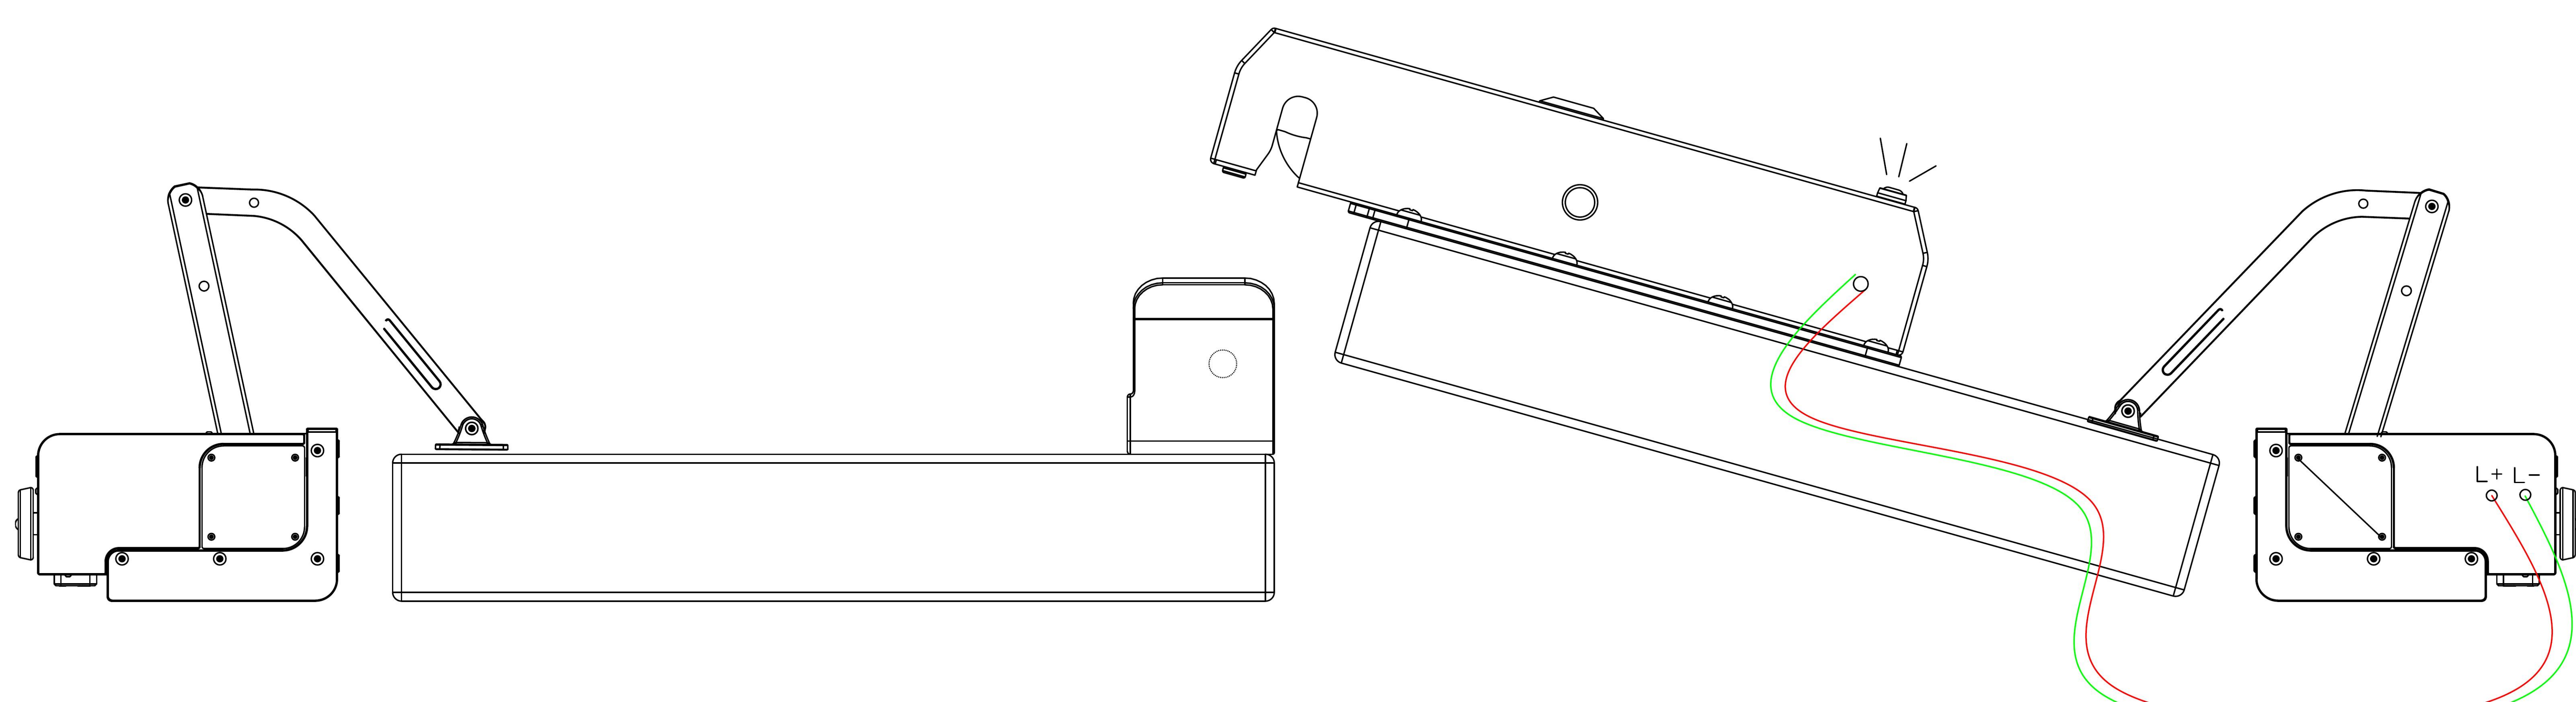

Parameter Settings:
1. This controller closes first and opens last;

Parameter Settings:
1. This controller opens first and closes last;
2. Move the jumper to the 24V terminal;
3. Set the lock mode to electric lock mode;
4. Enable the opening reverse function;


Double-Leaf Gate Installation

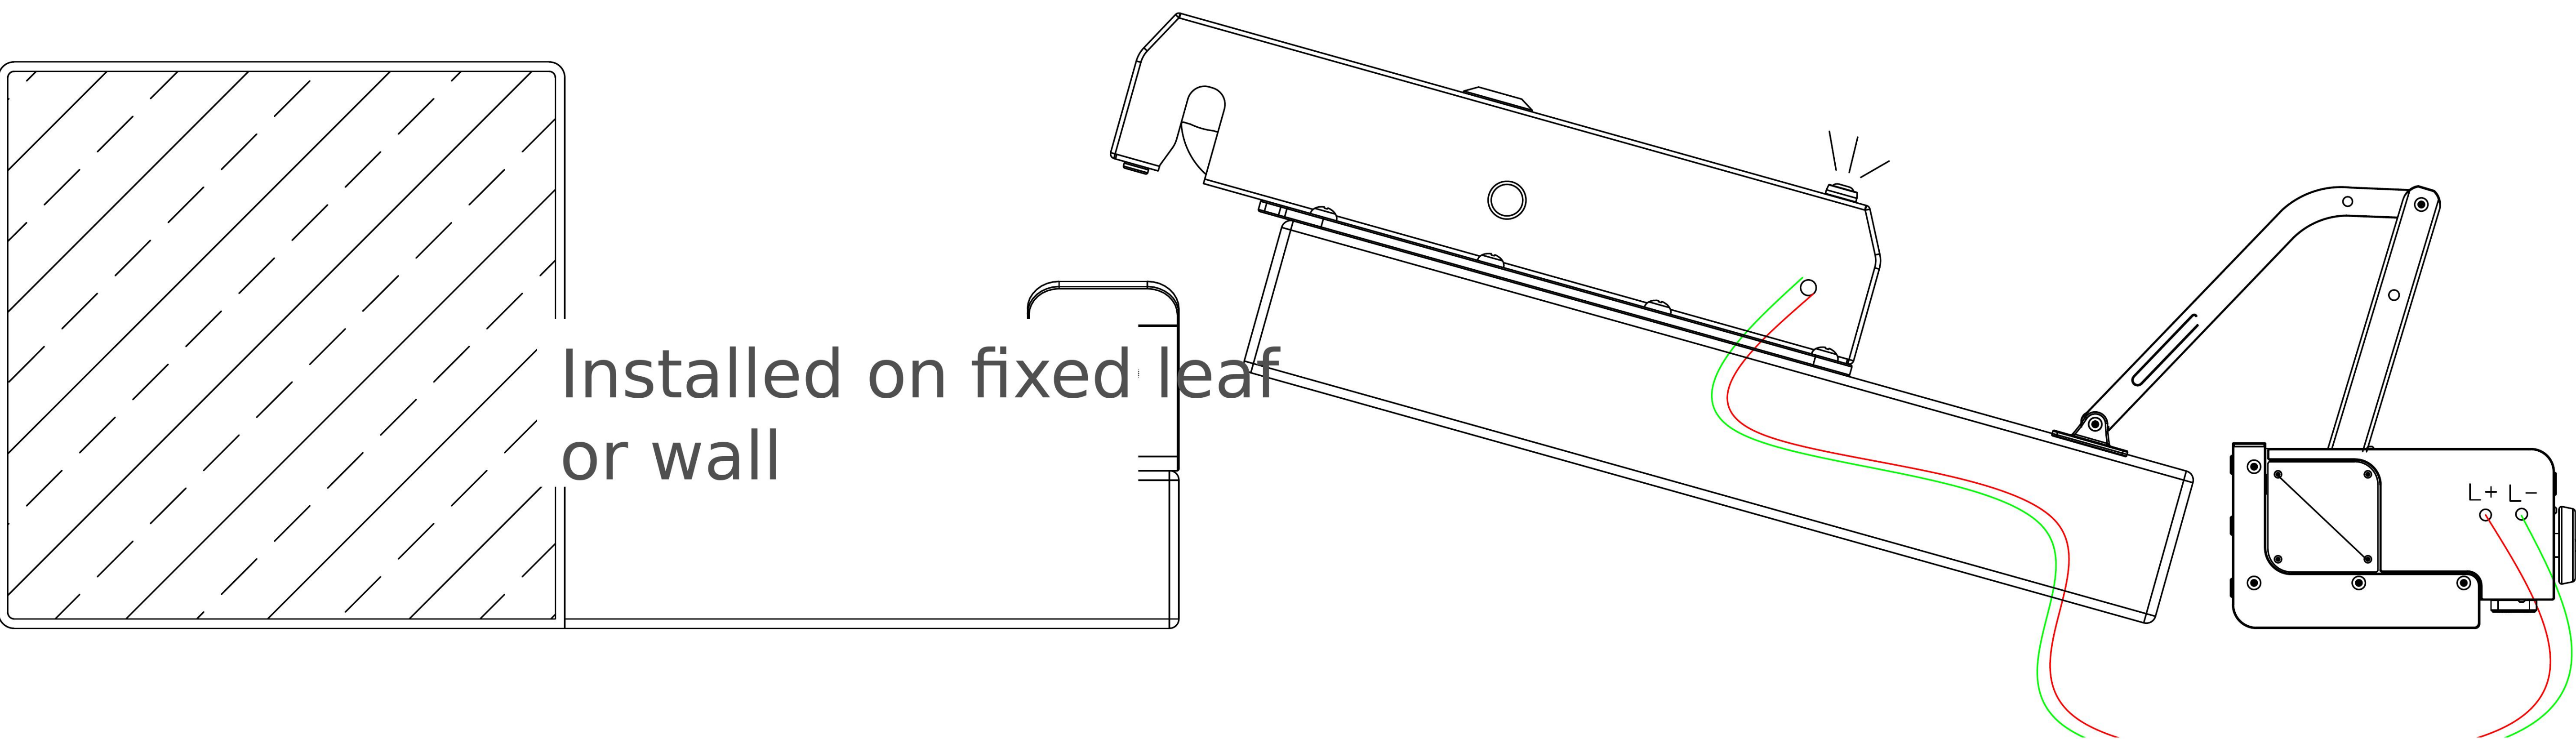

Installed on fixed leaf or wall

Parameter Settings:
1. Move the jumper to the 24V terminal;
2. Set the lock mode to electric lock mode;
3. Enable the opening reverse function;

Single-Leaf Gate Installation (Movable Lock Body)

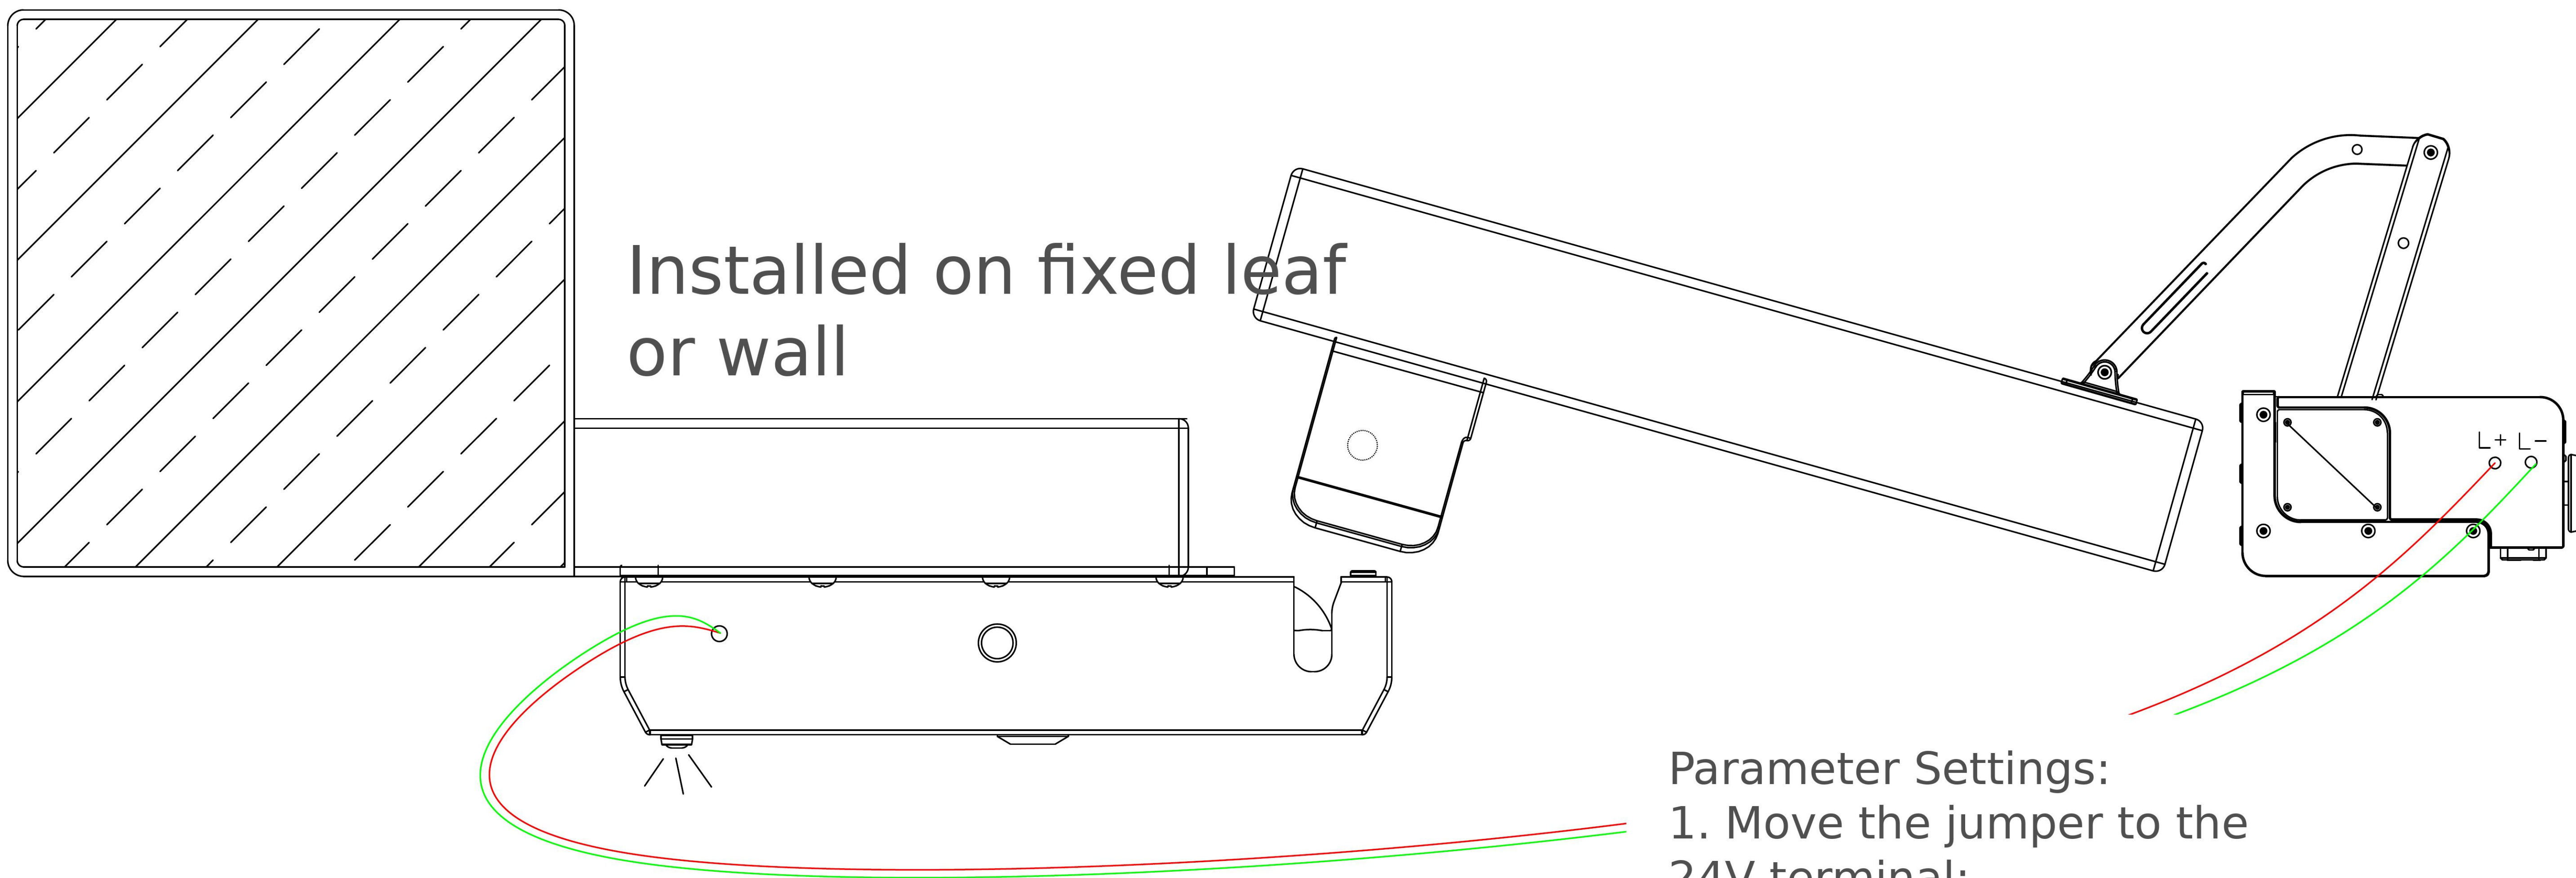

Installed on fixed leaf or wall

Parameter Settings:
1. Move the jumper to the 24V terminal;
2. Set the lock mode to electric lock mode;
3. Enable the opening reverse function;

Single-Leaf Gate Installation (Fixed Lock Body)